



Coffee Grinder Model CE873CG

INSTRUCTION MANUAL

SAVE THESE INSTRUCTIONS

Dear Valued Customer

Thank you for choosing to purchase a **Cascade** appliance, we appreciate your business. We have provided a product, which is value for money and is supported by our after sales service. We encourage you and your friends to choose from the range of **Cascade** appliances in the future.

Oriental Pacific

TECHNICAL INFORMATION

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply:	230-240V ~ 50 Hz – AC only
Rated Power:	100 watts

BEFORE FIRST USE

1. Your CASCADE Coffee Grinder has left the factory in good working order in this carton for your protection. Should the carton be damaged or if the product is dropped, damaged, has a malfunction in any way, or if the flexible cord is damaged, immediately contact your retailer for replacement or repair.
2. Carefully unpack your CASCADE Coffee Grinder. Make sure you do not discard any packaging material until all parts of the appliance have been found.
3. Carefully wipe the exterior of the appliance with a damp cloth to remove any dust that may have accumulated. Dry with a dry towel. Do not use abrasive cleaners.
WARNING Do not immerse in water or any other liquids.
4. Wipe the coffee bowl, the inside of the lid and blades with a damp cloth. Dry with a dry towel.
5. The appliance is now ready for operation.

OPERATION

This appliance has been designed for general household use only. The appliance is designed solely for the purpose of grinding roasted coffee beans and must not be used in any other capacity.

USE

- Always place the appliance on a flat, clean and non-slippery surface before operating it.
- Connect the grinder supply cord plug to the power supply and switch on.
- Remove the clear coffee grinder lid. Place up to 36 grams of roasted coffee beans into the stainless steel bowl located with the blades.

- 36 grams can be gauged by filling level to the top of the stainless steel bowl rim where the line of the plastic wall begins.
- Typical grinding times are indicated below.
 - 12 grams - 20 seconds
 - 24 grams – 25 seconds
 - 36 grams – 30 seconds
- Place the clear lid onto the grinder body. Switch on by pressing the lid safety switch down to activate the blades. Continue until the desired consistency is achieved. **Warning.** Do not operate the grinder continuously for periods of more than 1 minute. Do not press anything other than the safety switch onto the On / Off button as this is potentially very dangerous.

Note.


The grinding of coffee beans is critical to the overall taste and strength of the coffee to be made; fine grinding will result in a strong coffee while coarse grinding will be comparatively weak or watery. Experimentation may be required to suit personal tastes. Frozen coffee beans are acceptable and will not damage the blades. Never mix liquids in the grinder bowl. The power indicator will turn on when the blades are in use. Always wait for the blade to come to a complete stop and switch the machine off at the wall before removing the coffee.

Warning. Always switch off and disconnect from the mains supply when not in use. Do not touch any moving parts. Do not tamper with the safety switch.

CLEANING AND CARING

- Always disconnect your CASCADE Grinder from the mains supply before cleaning.
- Never immerse your appliance in water or other liquids.
- Wipe the exterior of the appliance with a damp cloth. Dry with a dry towel.
- Wipe the coffee bowl, the inside of the lid and the blades with a damp cloth. Dry with a dry towel.
- Store your appliance in its original box or in a dry cupboard.

Description

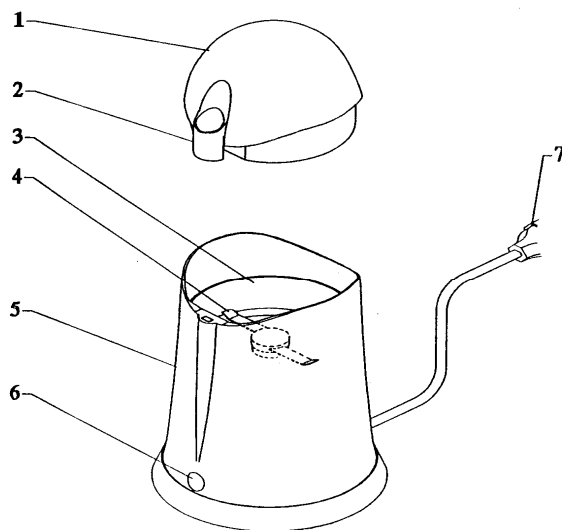

1 - Transparent Lid.
3 - Container.
5 - Case.
7 - Power Cord.

2 - Lid Safety Switch.
4 - Blade.
6 - Pilot Lamp.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Carefully read these instructions before using your appliance.
2. **CAUTION** Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.
3. Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.
4. **VERY IMPORTANT** Do not immerse in water or other liquids or use near washbasins or sinks.
5. Unplug from mains outlet when appliance is not in use, before attaching or removing accessories, and before cleaning.
6. An appliance dropped or damaged should not be used until examined by a service engineer.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
8. Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised Service-Dealer.
9. This appliance is intended for household use only and not for commercial or industrial use.
10. If appliance is to be used by a third party, please supply the instruction manual with it.
11. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when the product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: _____ Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

_____ Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged or warranty declined. For technical help contact the helpline.

Technical Assistance Helpline

New Zealand call Toll Free 0800-898580

Australia call Toll Free 1-800-858011

Email service@orientalpacific.com